


Horizontal barrier and additional measures for restoration of buildings

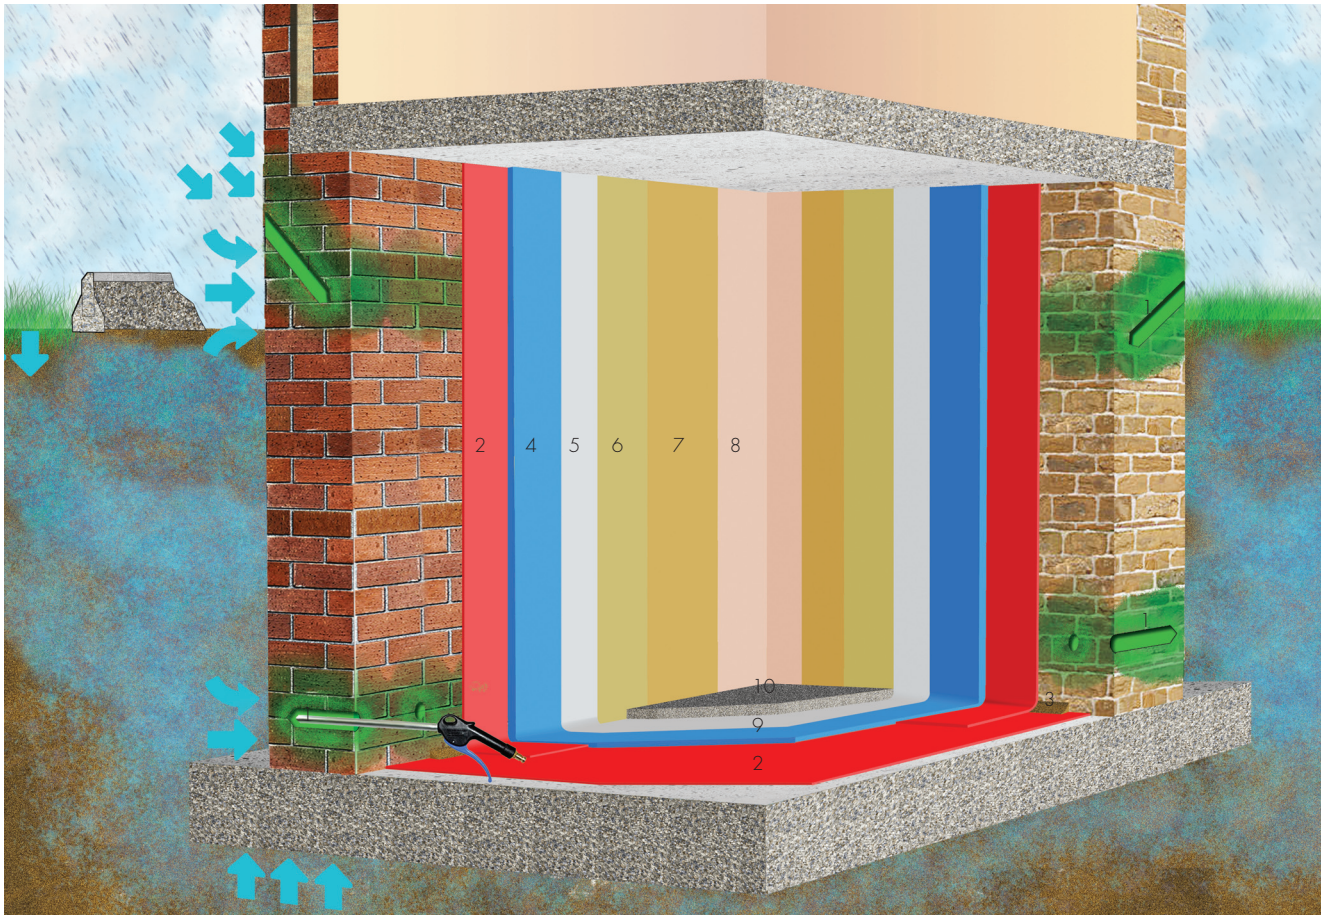

1. Horizontal barrier with AQUAFIN-F or AQUAFIN-HB2
2. Waterproofing with AQUAFIN-1K
3. Cove formed with ASOCRETRN
4. Waterproofing with AQUAFIN-2K/M or AQUAFIN-RS300
5. Fully-covered rough cast THERMOPAL-SP
6. Restoration plaster THERMOPAL-SR24 or THERMOPAL-SR44
7. Fine plaster THERMOPAL-FS33
8. Silicate paint ADICOR-SK
9. Bonding slurry ASOCRETHB-flex
10. Screed ASO-EZ2-Plus or ASO-EZ4-Plus or ASO-EZ6-Plus